
BA654D Field mounting Batch Controller

Issue 5

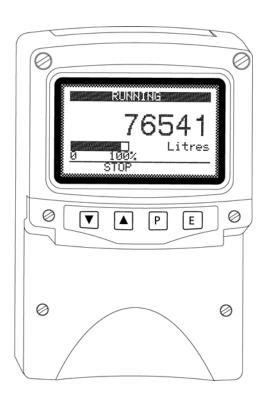

CONTENTS

1.	Des	scrip	tion			5.5	Batch se	ttinge
	_	_				5.5	5.5.1	Scale Points (Non-linear
- 2		•	ation				0.0.1	pulse inputs)
		2.1	Operato	or controls			5.5.2	Scale Factors (Non-linear
	_						3.3.2	pulse inputs)
;		-	m Desig				5.5.3	Scale Factor (Linear pulse
		3.1	Power s				5.5.5	
				Power supp	ly failure		5.5.4	inputs) Scaling (4/20mA input)
		3.2	Pulse in				5.5. 4 5.5.5	
				Switch conta			5.5.6	
				Proximity de			5.5.7	-
			3.2.3	Voltage puls			5.5.8	
		3.3		analogue inp	out		5.5.9	
		3.4	Switch of					Select Batch
		3.5		l switches				Batch History
		3.6	Inhibit li					CONTROL2delay
		3.7	Security	' link				CONTROL2delay CONTROL2stop
		_						CONTROL3delay
•			llation					CONTROL3stop
			Location					Count Mode
		4.2		ion procedure	е			Overrun Compensation
		4.3	EMC					Batch Cycles
	_							Restart Delay
;				n Menus			0.0.10	reduit Bolay
		5.1	Security			5.6	Rate sett	tinas
		5.2 5.3	Navigat	configuration			5.6.1	
		5.4		settings			5.6.2	- · · · · · · · · · · · · · · · · · · ·
		5.4		Language			5.6.3	
			5.4.2	User contro	le		5.6.4	Rate Legend
			5.4.3	Signal input	-		5.6.5	Timebase
			5.4.4	4mA calibra			5.6.6	Rate Filter
			5.4.5	20mA calibr			5.6.7	Flow Alarm
			5.4.6	Lineariser	allon		5.6.8	Clip-Off
			5.4.7	Restart				
			5.4.8	Output 2				
			5.4.9	Output 3		6. Calik	oration E	xamples
					tputs 4, 5 & 6			
				Pulse outpu				
				Clear grand			tenance	
				Defaults				nding during commissioning
			5.4.14	Security		7.2		nding after commissioning
			5.4.15	Operator so	reens	7.3	Servicir	
			5.4.16	Display			_	maintenance
			5.4.17	Output option	ons	7.5	Guaran	
				5.4.17.1 C	Control 2	7.6	Custon	ner comments
				5.4.17.2 C				
				5.4.17.3 F		0 100	essories	
				5.4.17.4 R		8.1	essories Tag nui	
				5.4.17.5 B		8.2		ounting kits
				6.4.17.6 P	ulse output	0.2	i ibe ilit	Santing Nito
						9. Inde	ex	
						Appen	dix 1	User Screens
						Appen	dix 2	Diagnostic information menu

1. DESCRIPTION

The BA654D is a field mounting batch controller primarily intended to control the dispensing of liquids, solids or components. It is a second-generation instrument that replaces field mounting applications of the BA550BP and the BA550BC.

Although incorporating sophisticated control functions, the BA654D is easy to operate and configure. Batch status and the function of the push-buttons are shown on the backlit graphic display which is visible in all lighting conditions. The instrument can provide single, dual or three stage control and may be used with both pulse and 4/20mA analogue output flowmeters.

Housed in a robust IP66 glass reinforced polyester (GRP) enclosure with an armoured glass window, the BA654D is surface mounting, or may be pipe mounted using one of the accessory kits.

2. OPERATION

Fig 1 shows a typical BA654D dispensing application. The BA654D controller incorporates programmable input scaling so that the total and rate displays may be in any engineering units such as litres or gallons.

The operator enters or selects, via the pushbuttons, the setpoint that is the required volume to be dispensed. Control 1 is energised immediately the *Start* push-button is operated, followed by Control 2 after a programmable time delay. Towards the end of the batch, Control 2 is de-energised a programmable volume before the batch setpoint is reached, when Control 1 is also deenergised.

By operating a small bypass valve from Control 1 and the main control valve from Control 2, the flow can be started and stopped slowly thus reducing batching errors and flow surges. If less accuracy is required, single stage control can be accomplished using just Control 1 and one control valve.

Control 1 is a dedicated output, but Outputs 2 and 3 may be configured as control, pulse or batch status outputs.

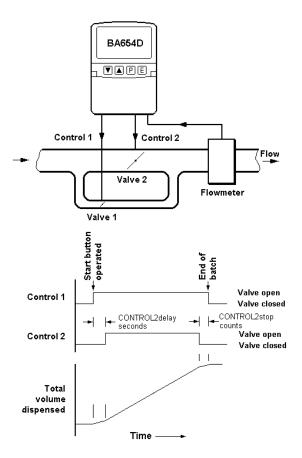


Fig 1 Typical batch control application

If additional outputs are required, three more may be added as a factory installed option.

The BA654D incorporates a selection of operator display screens allowing the installer to choose a display which only present essential information to the operator.

To prevent accidental or unauthorised adjustments, the operator and configuration menus may be protected by separate security codes. The configuration menu is also protected by a security link between terminals 18 & 19. This link may be hard-wired, or connected to an external key-switch when frequent changes are required.

Fig 2 shows a simplified block diagram of the controller.


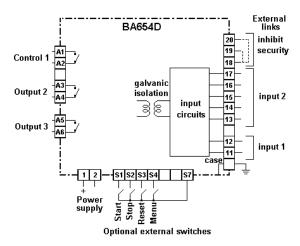


Fig 2 Simplified block diagram of BA654D

2.1 Operator Controls

The BA654D batch controller may be configured with one of six suites of operator display screens containing different combinations of information as shown in Appendix 1. The function of each push-button is shown immediately above the button at the bottom of the screen. Buttons that are not identified on the screen are not functional. The *Down, Up, P* and *E* identifications printed onto the push-buttons only apply when the instrument is being configured.

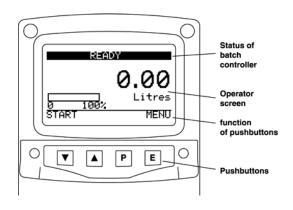

The operator functions are:

START Causes Control 1 to be energised which will start the batch. The screen will display 'Running' until the batch is completed, or the *STOP* pushbutton is operated.

STOP Operating this button during a batch immediately de-energises Control 1 and Control Outputs 2 & 3 if they are used, causing the batch to pause. 'Paused' will be displayed on the screen. During a pause any input signal continues to be counted.

The batch may be resumed at any time by pressing the *Start* button, or it may be aborted by operating the *Reset* button.

At the end of each batch the Control Output(s) will be de-energised and 'Complete' will be displayed on the screen.

RESET After completion of a batch the batch controller must be reset before the next batch can be started.

After resetting the screen displays 'Ready'. Input signals are ignored until the *Start* button is operated.

Note: Two selectable options modify the reset function.

Quick Restart eliminates the need to manually reset the BA654D at the end of each batch. When a batch is complete the batch controller will display the volume that has been dispensed. Operating the *Start* pushbutton will reset the batch controller and start another batch. See section 5.4.7

Auto Restart enables the batch controller to run continuously. At the end of each batch the controller waits for a programmable time before automatically resetting and starting another batch. This sequence will continue until a programmable number of batches has been completed or the *Stop* button is operated. See section 5.4.7

MENU

Operating this button gives access to the Operator Menu that may be protected by a four digit security code. This menu may be configured to give the operator access to any, or none of the following functions:

Select Batch Select 1 of 9

pre-entered setpoints

Batch Size Adjust 1 or all 9

setpoints.

Batch History Show size of last

10 batches.

Configure Full access to

the instruments configuration menu.

If no items are contained in the menu the operator can only start, pause and stop a batch. Inclusion of the Select Batch function allows the operator to select the batch setpoint from one of nine pre-entered values. To aid identification, each setpoint may be identified by a name having up to sixteen digits.

If included in the menu, the Batch Size function allows the adjustment of all the pre-entered batch setpoints.

Batch History shows the size of the last ten batches which have been completed.

The Configure function provides operator access to the batch controller configuration menus described in section 5. Entry to these menus is protected by an security link external between terminals 18 and 19 and an optional four digit security code.

3. SYSTEM DESIGN

The BA654D is a versatile instrument that may be used with most flowmeters having a pulse or 4/20mA output. Fig 3 illustrates the basic circuit that is used for all installations. Although the BA654D batch controller will operate from a wide range of input sources, only one source or transducer may be connected at any time.

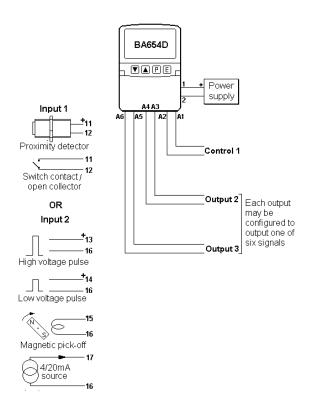


Fig 3 Basic batch controller circuit

3.1 Power supply

Any dc power supply having an output between 20 and 36 volts that is capable of supplying 95mA may be used to power the BA654D. The output ripple must not cause the instantaneous voltage to drop below 20V.

The batch controller inputs and outputs are galvanically isolated thus allowing multiple batch controllers to be operated from a common power supply. Similarly, if required the power supply may be earthed. If a common or earthed supply is used, the batch controller inhibit and security link terminals, and the optional external switch terminals should only be connected to electrically isolated switch contacts. i.e. they should not be earthed or connected to other circuits.

3.1.1 Power supply failure

If the power supply for the BA654D fails during a batch, the instrument will remember the amount of product dispensed when the supply failed, together with the number of cycle completed if autostart is being used. When power is restored, the batch controller will return in the Paused condition displaying the amount of product dispensed prior to the failure. Operating the *Start* pushbutton will complete the batch.

If the supply failure occurs when the batch controller is in the Ready or Complete state, the controller will return in the same state when power is restored.

3.2 Pulse inputs

As shown in Fig 3 the BA654D batch controller may be connected to a wide variety of pulse transducers and sources. Input 1 is for pulse sources that need powering by the batch controller such as switch contacts or a 2-wire proximity detector. Input 2 is for voltage pulse inputs such as the magnetic pickup in a turbine flowmeter, or a voltage pulse output from a flowmeter.

The following table shows the switching thresholds for the various transducers, plus the maximum operating frequency and the input terminal numbers. For reliable counting the input signal must fall below the lower switching threshold and rise above the upper threshold.

	Switching thresholds		Freq max	Input terminals
Switch	100Ω	1000Ω	100Hz	12 & 11 +
Proximity detector	1.2m A	2.1mA	5 kHz	12 & 11 +
Open collector	2kΩ	10kΩ	5kHz	12 & 11 +
Magnetic pickup	10m V	30mV	5kHz	16 & 15 +
Low voltage pulse	1V	3V	5kHz	16 & 14 +
High voltage pulse	3V	10V	5kHz	16 & 13 +

Note: Only one input may be used at a time.

3.2.1 Switch contact input

Any switch contact may be connected directly to terminals 12 & 11. Most magnetically activated reed relays used in turbine flowmeters may be used.

The maximum operating frequency for a switch contact input is 100Hz.

3.2.2 2-wire proximity detector input

Any 2-wire proximity detector complying with NAMUR switching thresholds (1.2mA and 2.1mA) may be connected to terminals 12 and 11.

When programmed to operate with a proximity detector, the maximum input frequency of the BA654D batch controller is 5kHz.

3.2.3 Voltage pulse input

Voltage pulse sources may be connected directly to input 2, the terminals used depend upon the input magnitude – see the table in section 3.2.

This enables the BA654D to be connected directly to most flowmeters incorporating a magnetic pickup, or an amplifier producing a high level pulse output.

When conditioned to operate with a voltage pulse source, the maximum input frequency of the BA654D batch controller is 5kHz.

3.3 4/20mA analogue input

The BA654D can also accept an analogue 4/20mA input representing rate of flow from a current source, **not a current sink**. Loop powered flow transmitters require an additional power supply. The batch controller input is galvanically isolated and only introduces a 0.6V drop into the 4/20mA loop. It may therefore be connected into to almost any flowmeter loop.

	Voltage drop	Freq. Max.	Input terminals
4/20mA	0.6V	2Hz	16 & 17+

3.4 Switch outputs

The BA654D batch controller has three single pole relay outputs which may be used for switching valves, actuators or contactors.

Output	Terminals
Control 1	A1 & A2
Output 2	A3 & A4
May be configured	
to output one of six	
different signals.	
Output 3	A5 & A6
May be configured	
to output one of six	
different signals.	

Each relay output has a maximum contact rating of:

240V 5A 2kVA 30V 5A

When a reactive load is being switched by the relay contact, it is essential that a suppressor is fitted to prevent contact damage and radio frequency interference. A $0.1\mu F$ capacitor in series with a 100Ω resistor connected between the relay contacts will usually provide adequate suppression. Proprietary encapsulated suppression assemblies can be purchased from electrical suppliers. Please note that BEKA associates' guarantee excludes relay contact damage.

WARNING

These switch outputs should not be used for critical safety applications.

When the BA654D power supply is turned off or disconnected, all BA654D switch outputs will open.

Notes: For applications requiring change-over contacts, the BA654D can be supplied with just Control 1 and Output 2 each having one change-over contact.

Three additional outputs, each of which may be configured to output one of six signals, are available as a factory fitted option. Each output is a single pole isolated solid state switch capable of switching a 30V, 100mA dc load.

3.5 External switches

For application requiring the batch controller to be controlled by large industrial pushbuttons, four external switches may be connected as shown in Fig 2.

Switch	Switch function when		
number	Operating	Configuring	
S1	Start	Down	
S2	Stop	Up	
S3	Reset	Р	
S4	Menu	Ε	

3.6 Inhibit link

Linking terminals 18 and 20 together inhibits the batch controller input. If linked during a batch, none of the outputs will change so dispensing will continue, but the volume dispensed while the link is connected will not be added to the batch display. This facility is intended for applications requiring pre-batch purging, or re-circulation during batching to maintain temperature or good mixing.

3.7 Security link

Access to the configuration menus is only available when terminals 18 & 19 are linked together. This may be achieved with a wire link, or a keyswitch when frequent security changes are required.

4. INSTALLATION

4.1 Location

The BA654D batch controller is housed in a robust IP66 glass reinforced polyester (GRP) enclosure incorporating an armoured glass window and stainless steel fittings. It is suitable for exterior mounting in most industrial environments, including off-shore and waste water treatment installations. Please consult BEKA associates if high vibration is anticipated.

The BA654D enclosure is surface mounting. Accessory kits described in sections 8.2 of this manual enable the instrument to be mounted onto a vertical or horizontal pipe.

The field terminals and the two mounting holes are located in a separate compartment with a sealed cover allowing the instrument to be installed without exposing the display assembly.


The BA654D earth terminal is connected to the internal EMC filters. For maximum radio frequency interference rejection this terminal should be connected to a local earth, or to an earthed cable screen.

The BA654D enclosure is supplied with a bonding plate to ensure electrical continuity between the three conduit / cable entries.


4.2 Installation Procedure

Fig 4 illustrates the instrument installation procedure.

- a. Remove the instrument terminal cover by unscrewing the two captive 'A' screws.
- b. Mount the instrument on a flat surface and secure with two M6 screws through the 'B' holes. Alternatively use one of the mounting kits described in section 8.2
- c. Remove the temporary hole plug and install an appropriate IP rated cable gland or conduit entry. If more than one entry is required, one or both of the IP66 stopping plugs may be replaced with an appropriate IP rated cable gland or conduit fitting.
- d. Connect the field wiring to the terminals as shown in Fig 5.
- e. Replace the instrument terminal cover and evenly tighten the two 'A' screws.




Step aRemove the terminal cover by unscrewing the two 'A' screws

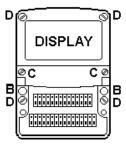

Step b

Secure the instrument to a flat surface with M6 screws through the two 'B' holes.
Alternatively use a pipe mounting kit.

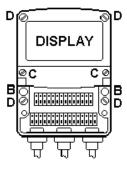

Steps c, d and e

Remove the temporary hole pluq and replace with a cable gland or conduit entry. If more than one entry is required, one or both of the IP66 stopping plugs may be replaced with an appropriate IP rated cable gland or conduit entry.

Finally replace the terminal cover and tighten the two 'A' screws.

Fig 4 BA654D installation procedure

4.3 EMC

The BA654D complies with the requirements of the European EMC Directive 2004/108/EC. For specified immunity all wiring should be in screened twisted pairs and the BA654D earth terminal should be locally earthed or connected to an earthed cable screen.

To prevent circulating currents, cable screens should only be earthed at one point.

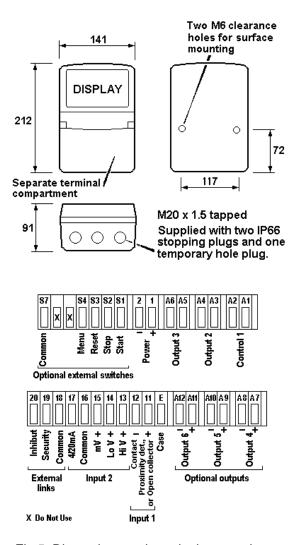


Fig 5 Dimensions and terminal connections

5. CONFIGURATION MENUS

The BA654D batch controller is configured via the front panel pushbuttons. Configuration functions are contained in three easy to use sub-menus, 'System Settings', 'Batch Settings' and 'Rate Settings'. A fourth sub-menu 'Information' shows how the instrument has been configured.

Although the BA654D batch controller contains many sophisticated functions, it remains simple to operate and configure. Menu navigation is explained in section 5.2. Guided by on-screen prompts, the use of the configuration functions is intuitive, but all the functions are fully described in this manual.

5.1 Security

To prevent unauthorised or accidental adjustment, the configuration menus can only be accessed when an external link is fitted between terminals 18 and 19 as shown below.

Terminals	Access to		
18 and 19	configuration menus		
Linked	Yes		
Not linked	No		

When authorised personnel need to make frequent configuration adjustments, the security link terminals may be wired to an external key switch.

The configuration menus may also be protected by a user selectable four digit security code.

A separate four digit user selectable security code may be applied to the operator menu.

5.2 Navigation

The BA654D is configured via the four front panel push-buttons which are identified by a printed legend.

This manual contains simplified drawings of the batch controller display screens associated with most functions. Although some screens may consist of multiple pages that are automatically accessed by scrolling through the options, in this manual they are shown on one page with the default option in bold.

Within this manual push-buttons are shown in italics e.g. *P* or *Up* push-button and legends displayed by the batch controller are shown within inverted commas e.g. 'Running'.

When the batch controller is displaying 'Ready' access to the main configuration menu is

obtained by pressing the *P* and *E* buttons simultaneously or, if enabled, via the Operator Menu. The configuration menus can not be accessed while the batch controller is running.

Once within the main menu the *Up* and *Down* buttons move the highlight bar between submenus. When the required option has been highlighted, operating the *P* button will access the sub-menu.

The highlight bar is static when indicating a menu or sub-menu. When indicating an option which has to be selected, or a variable that has to be entered, the highlight bar flashes on and off

The configuration main menu comprises four sub-menus:

System Settings Defines function of batch

controller including outputs & display

screen.

See Fig 6 & section 5.4

Batch Settings Defines batch

parameters.

See Fig 9 & section 5.5

Rate Settings Defines rate parameters.

See Fig 11 & section 5.6

Information Lists all the batch

controller settings and allows the Grand Total to be read. See Appendix 2.

Highlighting the required function within the sub-menu and operating the *P* pushbutton will enter the function menu. Functions offer a choice of options or an invitation to enter a variable.

To select an option in a function menu

Press the Up or Down button to move the flashing display highlight bar to the required option, operating the E button will then store the selected option and move the display up one level to the sub-menu.

To enter a variable

Variables are entered digit by digit, the flashing digit being adjusted using the *Up* or *Down* button. When a digit is set as required operating the *P* button will transfer control to the next digit. When all the digits have been adjusted, operating the *E* button will store the variable and move the display up one level to the submenu.

When navigating through the menus the pushbutton(s) should be held until the required screen is displayed.

Note:

Functions that are dependent on a higher level option are automatically removed from the submenu when the higher level option is not selected. e.g. If the batch controller is configured for a pulse input, all the calibration functions associated with a 4/20mA input will be automatically removed from the menus.

5.3 Default configuration

Unless otherwise requested at the time of ordering, BA654D batch controllers will be supplied configured as follows:

System Settings

Language English
Operator control Both Local & Remote.

Signal Input Open Collector

Lineariser Off
Restart Normal
Output 2 Unused
Output 3 Unused
Optional outputs 4, 5 & 6
Pulse Output Display / 1
Grand Total Cleared

Security

Config. Code 0000 Operator Code 0000

Operator Menu

Batch Sizing On Batch Select On History On Config. Menu On

Operator Screens Screen 1

Batch Settings

Scale factor (Linear pulse) 000001. Scaling (4/20mA input) 000001. Batch D.P. 00000000. Batch Legend No legend Batch Limit 99999999 **Batch Names** Batch 1 Batch Size 00000000. Select Batch Batch 1 0000 CONTROL2delay CONTROL2stop 00000000. CONTROL3delay 0000 CONTROL3stop 00000000. Count Mode Uр Overrun Comp Off Batch Cycles

Restart Delay 00:00:00

Rate Settings

Rate Scaling 000001.
Rate D.P. 00000.0
20mA Display 00100.0
Rate Legend No legend
Timebase Seconds

Rate Filter

Smoothing 2 Jump-Out 4 low Alarm 0000

Flow Alarm 00000.0 Inhibit Time 0000 Clip-Off 00000.0

Default parameters may be globally restored see section 5.4.13

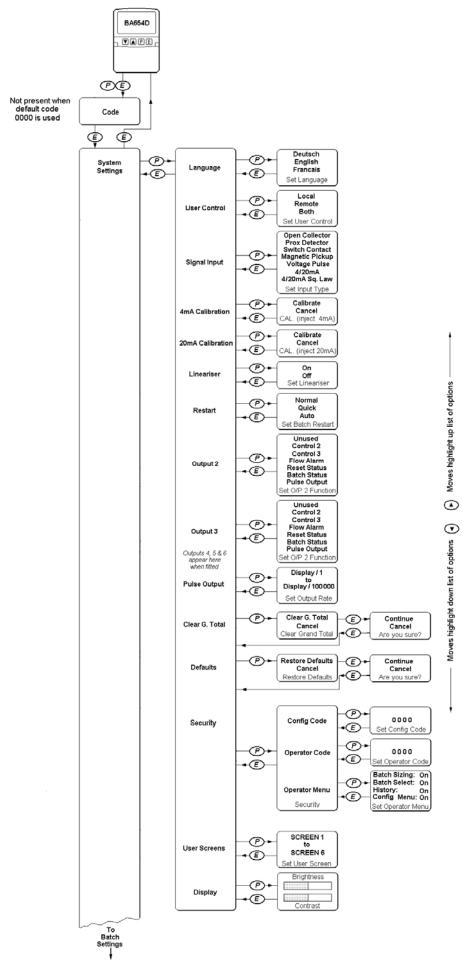


Fig 6 System Settings

5.4 SYSTEM SETTINGS

See Fig 6.

5.4.1 Language

The BA654D can display operating messages and menus in three different languages:

Deutsch **English** Francais

Set Language

Highlight the required language and press *E* to enter the selection.

5.4.2 User Controls

The BA654D batch controller may be controlled by the front panel pushbuttons, by remote switches or by both the front panel switches and the remote switches.

Local Remote **Both**

Set Operator Controls

Highlight the required option and press *E* to enter the selection.

5.4.3 Signal Input

A wide variety of analogue and digital transduces and sources may be connected to the batch controller.

Open Collector

Prox Detector Switch Contact Magnetic pickup Voltage Pulse 4/20mA 4/20mA Sq. Law

Set Input Type

Notes:

Input terminals vary depending upon the type of input, see sections 3.2 and 3.3

The brilliance of the display backlight is reduced when open collector, proximity detector or switch contact inputs are selected.

5.4.4 4mA Calibration

Note: Only necessary when 4/20mA input is used

When the BA654D batch controller is supplied the analogue current input will have been accurately factory calibrated, it is only necessary to perform this calibration as part of routine maintenance.

To perform the calibration connect a 4 to 20mA current source to batch controller terminals 16 & 17(+) and adjust the input current to exactly 4mA. To achieve maximum batch controller performance, the accuracy of the current source should be greater than $\pm 0.025\%$ (4uA).

To prevent the batch controller calibration being accidentally corrupted the instruction has to be confirmed before it will be executed.

Calibrate Cancel

CAL. (Inject 4mA)

Highlight the 'Calibrate' option and operate the E pushbutton, which will result in the confirmation screen being displayed. To perform the calibration highlight 'Continue' and press E, after a few seconds the display will return to the System setting menu.

Continue Cancel

Are you sure?

5.4.5 20mA Calibration

This function is identical to the 4mA calibration described in the previous section 5.4.4, but a 20mA input current should be used.

5.4.6 Lineariser (Pulse inputs)

The 16 point straight line lineariser will compensate for k-factor non-linearity in turbine flowmeters.

This function turns the lineariser on and off, calibration parameters are entered in the Batch Setting menu – See sections 5.5.1 and 5.5.2.

On Off

Set Lineariser

Highlight the required setting and press *E* to enter the selection.

5.4.7 Restart

This function determines what happens at the end of each batch. There are three options:

Normal:

The display screen shows the volume that has been dispensed. Before another batch can be started the Reset push-button must be operated. The screen will then display 'Ready'.

Quick:

The display screen shows the volume that has been dispensed. Operating the Start pushbutton will reset the batch controller and start another batch.

Auto restart: The display screen shows the volume that has been dispensed. After a configurable restart delay (See 5.5.19) the batch controller automatically resets and starts another batch. The number of batch cycles to be performed is defined by the Batch Cycle function, which is contained in the Batch Setting menu. See 5.5.18

Normal Quick

Auto

Set Batch Restart

Highlight the required option and press E to enter the selection.

5.4.8 Output 2

Output 2 is a single pole relay contact that is connected to terminals A3 and A4. It may be configured to output any one of six different signals, or may be unused.

Unused

Control 2 Control 3 Flow alarm Reset status Batch status Pulse Output

Set O/P 2 Function

Highlight the required option and press E to enter the selection.

Note: Two or more of the outputs may be configured to output the same function.

5.4.9 Output 3

As Output 2 except terminals are A5 and A6.

5.4.10 Optional outputs 4, 5 and 6

Only available when factory fitted option is installed in the BA654D batch controller. Configuration is the same as for Output 2, except terminal numbers are:

Output	Terminal numbers
4	A7 (+) & A8
5	A9 (+) & A10
6	A11 (+) & A12

and outputs are single pole solid state. See 3.4.

5.4.11 Pulse Output

Any of the batch controller outputs may be configured as a pulse output. The number of output pulses is proportional to the total volume dispensed by the batch controller. This Pulse Output function enables the pulse output frequency to be reduced by one of five dividing factors between 10 and 100,000.

Display / 1 Display / 10 Display / 100 Display / 1000 Display / 10000 Display / 100000 Set Output Rate

Highlight the required option and press E to enter the selection.

Note: Maximum output frequency is 4 Hz.

5.4.12 Clear Grand Total

The Grand Total is a record of the total quantity of product dispensed since the Grand Total was last reset to zero. It must be zeroed every time the batch controller scaling is changed

The Grand Total can be viewed in the Information section of the System Menu – see section 5.2 and Appendix 2.

CAUTION After zeroing, the old grand total can not be recovered

To prevent the Grand Total being accidentally zeroed, the clear instruction has to be confirmed before it will be executed.

> Clear G Total Cancel

Clear Grand Total

If 'Clear G Total' is highlighted and the *E* pushbutton operated, a second screen will be presented. To confirm that the Grand Total is to be zeroed highlight 'Continue' and press *E* which will result in the instruction being executed.

Continue Cancel

Clear Grand Total

5.4.13 Defaults

This function allows the configuration defaults listed in section 5.3 to be globally restored. Although useful for defining a starting point when commissioning a batch controller, the settings overwritten by this command can not be recovered

CAUTION

After restoring default configuration the previous settings can not be recovered.

To prevent the default settings being accidentally restored, the instruction has to be confirmed before it will be executed.

Restore Defaults
Cancel

Restore Defaults

If 'Restore Defaults' is highlighted and the *E* pushbutton operated, a second screen will be presented. To confirm that the defaults are to be restored, highlight 'Continue' and press *E* which will result in the instruction being executed.

Continue Cancel

Restore Defaults

5.4.14 Security

A summary of instrument security is contained in section 5.1 of this manual.

This security function enables the four digit security codes protecting the configuration and operator menus to be defined. It also allows the contents of the operator menu to be selected.

Config Code Operator Code Operator Menu

Security

Highlighting the required function and pressing *P* will result in a selection menu being displayed.

Each of the two security codes is entered digit by digit, when all four digits have been set, pressing *E* will enter the code and return the display the security menu.

0000

Set Config Code

Note: Default code 0000 disables the security function and allows unrestricted access to the menu.

Access to the Configuration Menus is also protected by an external link as described in section 5.1.

Contents of the Operator Menu are defined by toggling the 'On / Off' box associated with each item. To make the selection, highlight the item to be changed and operate the *P* button. The item may then be turned 'On' or 'Off' using the *Up* or *Down* push-buttons.

Batch Sizing: On
Batch Select: On
History On
Config Menu: On

Set Operator Menu

Pressing *E* will enter the selection, another item may then be selected or the display returned to the Security menu by pressing *E* again.

5.4.15 Operator Screens

The user screen may be selected from six different formats that are shown in Appendix 1.

They show different information and have different display sizes so that the operator is only presented with the essential information necessary to operate the batching system. Some screens include graphical information allowing batch progress to be rapidly assessed.

Screen 6 is intended for commissioning and shows all engineering information including output status and flow rate.

SCREEN 1 SCREEN 2 to SCREEN 6 Set User Screen

Highlight the required option and press E to enter the selection.

5.4.16 Display

The display contrast and backlight brilliance are adjustable using this function. The two adjustments are made with the *Up* and *Down* buttons, the amplitude of each being shown on a horizontal bargraph. Control is transferred between brilliance and contrast by operating the *P* pushbutton.

After adjustment pressing *E* enters the changes and returns the display to the System Menu.

5.4.17 Output options

Control 1 is a dedicated output that is always connected to terminals A1 and A2. Control 1 is energised immediately the *Start* button is operated and de-energised when the batched volume equals the batch setpoint.

Outputs 2 and 3 may be configured to output six different signals or they may be unused as described in sections 5.4.8 & 9. The following sections describe each of these selectable signals.

5.4.17.1 Control 2

This output is similar to Control 1. It is energised a configurable time CONTROL2delay after Control 1 is energised and de-energised a configurable batched volume CONTROL2stop before Control 1 is

de-energised. Fig. 1 shows the operation diagrammatically.

5.4.17.2 Control 3

This output is identical to Control 2 except delays are defined by CONTROL3delay and CONTROL3stop.

5.4.17.3 Flow alarm

This output is described in section 5.6.7

5.4.17.4 Reset status

The reset status output indicates when the batch has been started and when the controller has been reset and is ready to start another batch. See Fig 7.


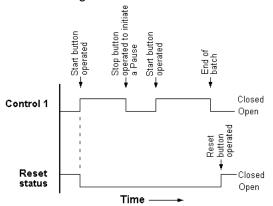


Fig 7 Reset status timing

5.4.17.5 Batch status

The batch status output is the inverse of Control 1 except that it does not close when a pause is initiated during a batch. See Fig 8.

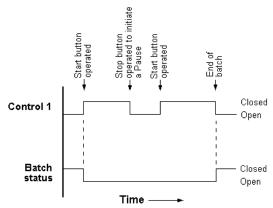

Batch status is inverse of Control 1 but does not close when batch controller is Paused

Fig 8 Batch status timing

5.4.17.6 Pulse output

This output is described in section 5.4.11

BLANK PAGE

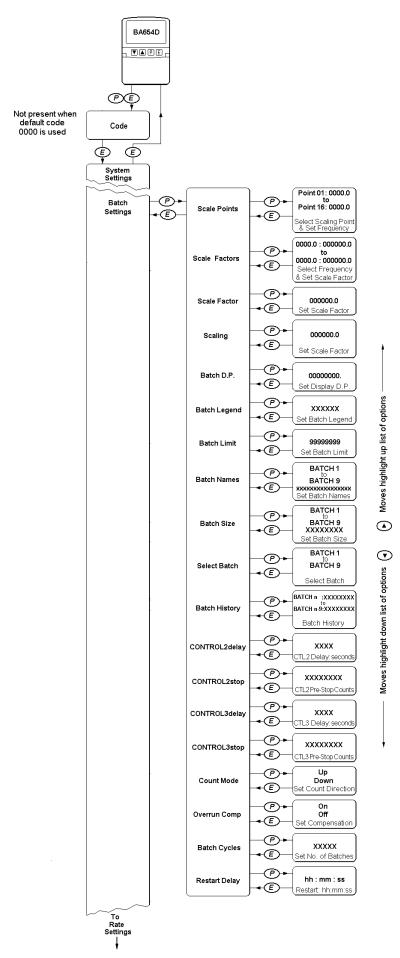


Fig 9 Batch Settings

5.5 BATCH SETTINGS See Fig 9.

5.5.1 Scale Points (Non-linear pulse inputs) This and the following Scale Factors function described in section 5.5.2 are used to calibrate the 16 point lineariser. The lineariser is activated from the System Menu - see section 5.4.6.

Fig 10 shows the relationship between input frequency and Scale Factor for a lineariser using three breakpoints. Up to sixteen breakpoints may be used, the input frequency for any breakpoints that are not required should be set to zero.

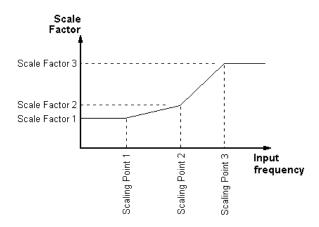


Fig 10 Three point lineariser

The Scale Factor at input frequencies below the lowest Scaling Point is the same as that entered for the lowest Scaling Point.

The Scale Factor for input frequencies above the highest Scaling Point is the same as that entered for the highest Scaling point.

The Scale Factor at input frequencies between two Scaling Points is calculated according to a straight line between the Scale Factors at the two points.

The input frequency at which each breakpoint is require should be set using this function.

Point 01: XXXX.X to Point 16: XXXX.X

Select Scaling Point / Set Frequency

5.5.2 Scale Factors (Non-linear pulse inputs)

The k factor of a flowmeter is the number of output pulses that it produces per unit volume e.g. 70 pulses per litre.

The batch controller's Scale Factor is a dividing factor adjustable between 0.001 and 999999, which is used to convert the output pulses from the flowmeter into a volume display in engineering units.

Volume displayed = Number of input pulses Scale Factor

If the Scale Factor is set to the flowmeter's k factor, the batch controller will display volume in the flowmeter's engineering units.

e.g. For a flowmeter having a k factor of 70 pulses per litre, the batch controller Scale Factor may be selected to provide the required display

Scale Factor	Least significant Display digit represents Litres
0.7	Hundredths of a Litre
7.0	Tenths of a Litre
70.0	Litres
700.0	Tens of Litres
7000.0	Hundreds of Litres
318.2	Gallons

(There are 4.54609 litres in a UK gallon)

This function sets the required Scale Factor at each Scaling Point input frequency (breakpoint) defined in the Scaling Point function described in section 5.5.1

XXXX.X: XXXXXX
to
XXXX.X: XXXXXX
Select Frequency / Set Scale Factor

5.5.3 Scale Factor (For linear pulse inputs**)** The k factor of a flowmeter is the number of output pulses that it produces per unit volume

output pulses that it produces per unit volume e.g. 70 pulses per litre.

The batch controller's Scale Factor is a

The batch controller's Scale Factor is a dividing factor adjustable between 0.001 and 999999, which is used to convert the output pulses from the flowmeter into a volume display in engineering units.

Volume displayed = Number of input pulses Scale Factor

If the Scale Factor is set to the flowmeter's k factor, the batch controller will display volume in the flowmeter's engineering units.

e.g. For a flowmeter having a k factor of 70, the Cal Value may be selected to provide the required display

Scale Factor	Least significant Display digit represents Litres
0.7	Hundredths of a Litre
7.0	Tenths of a Litre
70.0	Litres
700.0	Hundreds of Litres
318.2	Gallons

(There are 4.54609 litres in a UK gallon)

000001.

Set Scale Factor

5.5.4 Scaling (For 4/20mA input)

The 4/20mA analogue output from a flowmeter represents the rate of flow, which may be displayed by the BA654D batch controller in any engineering units. See section 5.6.3

Total batched volume is calculated by integrating the flow rate during the batching period.

The batch controller Scale Factor, which is a dividing factor that may be adjusted between 0.001 and 999999, defines the arithmetic relationship between the units of measurement of the rate and the total batched displays.

Scale Factor = <u>Units of batched display</u> Units of rate display

When calculating this Scale Factor, the required units of measurement for the total batched display must be converted to those used for the rate display as shown in the following example.

The BA654D rate display represents litres per second but the total batched display is required in UK gallons.

Scale Factor = <u>Units of batched display</u> Units of rate display

Scale Factor = 4.5461

If the rate display and the total batched display are required in the same units of measurement, the Scale Factor should be set to 1.0

000001.

Set Scale Factor

5.5.5 Batch D.P.

The position of the decimal point in the batch display, which determines the resolution of the display, is set by this function. In operation leading zeros are suppressed

00000000.

Set Display D.P.

The function also determines the position of the decimal point in the Batch Size, Batch Limit and Pre-Stop functions.

5.5.6 Batch Legend

The units of measurement of the batched volume can be entered with this function. Up to six upper and lower case alphanumeric characters may be used. Some of the operator screens will display this legend against the batch display.

XXXXXX

Set Batch Legend

5.5.7 Batch Limit

To prevent accidental over-filling, the Batch Limit defines the maximum batch that may be dispensed. If a batch setpoint greater than the Batch Limit is entered, it will be accepted but a warning will appear on the screen. The position of the decimal point will be the same as the batch display. See 5.5.5.

9999999

Set Batch Limit

5.5.8 Batch Names

This function enables up to nine pre-entered batch setpoints to be identified with individual names each having up to sixteen alphanumeric characters. The name is displayed when the Batch Size setpoint is selected or adjusted see sections 5.5.9 and 5.5.10. Some of the operator display screens also show the setpoint name.

Batch 1

Set Batch Names

5.5.9 Batch Size

The named batch setpoints can be assigned a value with this function. The position of the decimal point in all the setpoints will be as defined by the Batch D.P. function. - See 5.5.5.

Batch 1

Batch 2

То

Batch 9

0000000. Set Batch Size

Note: May be included in Operator Menu.

See 2.1

5.5.10 Select Batch

This allows the batch controller's operating setpoint to be selected from the nine preentered setpoints. To select, highlight the name of the required setpoint and press *E*. The setpoint value will be shown at the bottom of the display screen.

Batch 1

Batch 2

To Batch 9

XXXXXXX

Select Batch

Note: May be included in Operator Menu.

See 2.1

5.5.11 Batch History

The volume of product dispensed in the previous nine batches is recorded by this function.

Batch n: XXXXXXX

n-1:

n-2:

to n-9:

Batch History

Note: May be included in Operator Menu.

See 2.1

5.5.12 CONTROL2delay

(Control 2 Start Delay)

At the start of a batch, Control 1 is energised immediately the *Start* button is operated. Control 2 may be energised at the same time, or delayed for up to 3600 seconds by this function.

0000

CTL2 Delay: Seconds

5.5.13 CONTROL2stop (Control 2 Pre-Stop) Control 1 is de-energised when the batched total equals the batch setpoint. Control 2 may be de-energised at the same time, or a programmable batch quantity before the batch setpoint is reached. This quantity is defined by CONTROL2stop which is displayed in the same units as the batched total.

00000000.

CTL2 Pre-Stop: Counts

5.5.14 CONTROL3delay

(Control 3 Start Delay)

As Control 2 Start delay described in section 5.5.12 except the delay applies to Control 3.

5.5.15 CONTROL3stop (Control 3 Pre-Stop) As Control 2 Pre-Stop described in section 5.5.13 except this function applies to Control 3.

5.5.16 Count Mode

This function determines whether the batch display counts upwards from zero to the batch size setpoint, or downwards from the batch size setpoint to zero.

Up

Down

Set Count Direction

Highlight the required option and press *E* to enter the selection.

5.5.17 Overrun Compensation

Overrun compensation automatically corrects for time delays in the batching system that may cause product dispensing to continue after Control 1 has been de-energised. The average overrun of the last three batches is used for the correction.

When overrun compensation is selected, the average amount of product dispensed between Control 1 being de-energised and the batch controller being reset is calculated. This quantity is automatically subtracted from the batch setpoint for subsequent batches.

If the flow alarm has been assigned to one of the outputs, overrun compensation will be calculated using the product dispensed between Control 1 being de-energised and the flow alarm being activated or the batch controller being reset, whichever occurs first.

> On **Off**

Set Compensation

Highlight the required option and press *E* to enter the selection.

5.5.18 Batch Cycles

When the 'Restart' function described in section 5.4.7 is set to 'Auto Restart', this function defines the number of batches that are performed. Any number of cycles up to 10,000 may be entered.

00001

Set No. of Batches

Set the required number of cycles digit by digit and press *E* to enter the value.

5.5.19 Restart Delay

When the 'Restart' function described in section 5.4.7 is set to 'Auto Restart', this function defines the delay between one batch finishing and the next batch starting. Any delay up to 24 hours may be set.

00:00:00

Restart: hh: mm: ss

Set the required delay time digit by digit and press *E* to enter the value.

BLANK PAGE

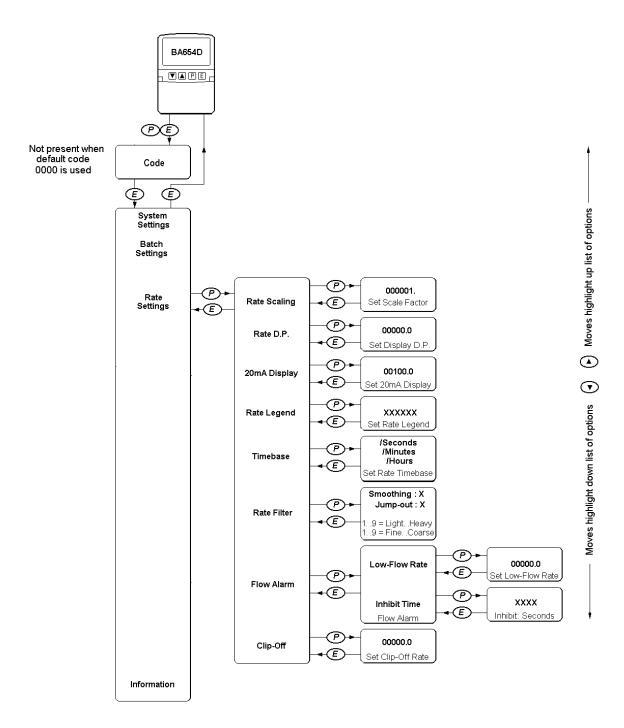


Fig 11 Rate Settings

5.6 RATE SETTINGS

See Fig. 11

5.6.1 Rate Scaling (For pulse inputs)

The Rate Scaling factor, which may be adjusted between 0.001 and 999999, defines the arithmetic relationship between the units of measurement of the batch display and the rate display units of measurement.

Rate Scaling Factor = <u>Units of rate display</u> Units of batch display

When calculating the Rate Scaling Factor, the required units of measurement for the rate display must be converted to those used for the batch display as shown in the following example.

The BA654D batch display is in UK gallons but the rate display is required in litres.

Rate Scaling Factor = <u>Units of rate display</u> Units of batch display

> = <u>1 litre</u> 1 gallon

= <u>1 litre</u> 4.5461 litres

Rate Scaling Factor = 0.21997

If the rate display is required in the same units as the batch display, the Rate Scaling Factor should be set to 1.0

000001.

Set Scale Factor

5.6.2 Rate D.P. (For pulse inputs)

The position of the rate display decimal point, which determines the resolution of the display, is set by this function. In operation leading zeros are suppressed

0.0000

Set Display D.P.

5.6.3 20mA Display (For 4/20mA input)

The rate display at 20mA is set with this function. The range of adjustment is between 0.00001 and 999999

00100.0

Set 20mA Display

The display may represent flow per second, per minute or per hour. The units of time are defined by the Timebase, which determines how the measured rate is integrated to produce the batch display. See 5.6.5

5.6.4 Rate Legend

This function enables the units of the rate display to be entered. Up to six upper and lower case alphanumeric characters may be used. Some of the operator screens will display this legend against the rate display.

XXXXXX

Set Rate Legend

5.6.5 Timebase

The exact function of the timebase depends upon whether the batch controller is conditioned to receive a pulse input or a 4/20mA analogue input.

Pulse inputs

Number of pulses received is proportional to volume dispensed.

The timebase multiplies the rate display by 60 if flow per minute is to be shown and by 3,600 if flow per hour is to be shown.

4/20mA Analogue input

Amplitude of the input current is proportional to rate of dispensing (flow).

The timebase does not affect the rate display. If the rate display represents flow per minute, the batch display is divided by 60, if the rate display represents flow per hour the batch display is divided by 3,600.

/Second

/Minute /Hour

Set Rate TimeBase

Highlight the required option and press *E* to enter the selection.

5.6.6 Rate Filter

The BA654D contains a digital filter with two independent adjustable parameters enabling the rate display frequency response to be tailored for optimum performance.

Smoothing

Amount of filtering applied (time constant). Adjustable between 0 and 9, where 0 is no filtering and 9 is maximum filtering.

Smoothing	Filter time constant
	seconds
0	0
1	1.3
2	4.3
3	6.5
4	8.7
5	11.3
6	15.7
7	20.9
8	25.2
9	31.5

Jump-Out

Defines the deviation from the displayed rate at which the filter will be overridden and the rate display will move rapidly to the new value.

Jump-Out	Magnitude of step change which will produce a rapid response
0	Off
1	1%
2	2%
3	4%
4	8%
5	12%
6	16%
7	24%
8	32%
9	64%

By careful adjustment of the two parameters a stable display with an acceptable step input response can be obtained for most applications.

During commissioning it is recommend that initially Jump-Out is set to 0 (off) and Smoothing is adjusted to provide acceptable rate display stability. Jump-Out should then be increased until the selected step size is greater than the noise on the display signal, at which setting the rate display will again become stable. These will be the optimum filter parameters for acceptable rate display stability and a fast response to a large rate signal change.

Smoothing: 2
Jump-Out: 4

1..9 = Light..Heavy / 1..9 = Fine..Coarse

5.6.7 Flow Alarm

The flow alarm may be assigned to any of the batch controller outputs – See section 5.4.8 When the flow rate falls below the flow alarm setpoint, the assigned output will close, the BA654D will enter a pause condition and the display will show 'Paused – Low Flow'.

To prevent false alarms at the start of a batch while the flow rate increases, the flow alarm may be inhibited for between 1 and 3,600 seconds after the batch is started.

Low-Flow Rate Inhibit Time

Flow Alarm

Highlight the 'Low-Flow Rate' option and operate the *P* pushbutton, which will result in the 'Set Low-Flow Rate' screen being displayed with the decimal point positioned as already specified. Set the required alarm setpoint digit by digit then press *E* to enter the value and return to the 'Flow Alarm' screen.

If the alarm is to be inhibited while the batch is starting, highlight the 'Inhibit Time' option and operate the *P* pushbutton which will result in the 'Inhibit: Seconds' screen being displayed. Set the required inhibit time digit by digit and then press *E* to enter the value and return to the 'Flow Alarm' screen.

5.6.8 Clip-Off

To prevent the batch total being incremented at very low flow rates where flowmeters may be less accurate, the BA654D incorporates an adjustable clip-off function. At flow rates below the adjustable clip-off threshold, the rate display is forced to zero and the batch display is not incremented.

0.0000

Set Clip-off Rate

6. CALIBRATION EXAMPLE

In this example a BA654D batch controller is required to control the dispensing of a liquid into a tank as shown in Fig. 12.

The BA654D batch controller is required to:

Dispense 1,000 or 500 litres of product into a tank having a maximum capacity of 1,100 litres. Two volumes to be identified Full volume and Half volume respectively.

The flowmeter incorporates a proximity detector and produces an output of 25 pulses per litre.

Display the dispensed total with a resolution of 0.1 litres.

Batch Controller to count upwards from zero to the batch setpoint.

Control two parallel valves (2 stage control).

At start of the batch valve 2 is to open 10 seconds after valve 1 and to close when 50 litres of product remain to be dispensed.

Compensate for errors resulting from actuator delays.

Initiate an alarm if the flow rate falls below 0.2 litres per second. Alarm to be inhibited for the first 20 seconds of the batch.

Operator needs to select the batch size from the operator menu, but must not be able to adjust the two setpoints. The operator requires access to the history of the last ten batches but must not have access to the configuration menus.

The process is to be controlled by the batch controller's front panel switches. The Reset function is not required.

The Operator Menu is not to be protected by a security code, but the Configuration Menus are to be protected by code 1209.

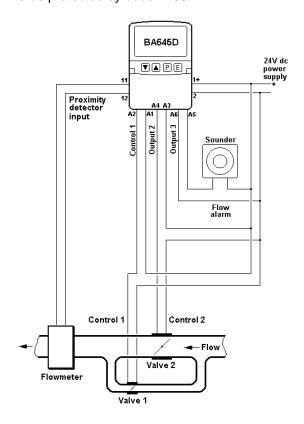


Fig 12 Liquid dispensing system

System Settings

Function Language	Setting English
User Controls	Local
Signal Input	Prox Detector
Lineariser	Off
Restart	Quick
Output 2	Control 2
Output 3	Flow Alarm
Clear Grand Total	Yes
Security Config Code Operator Code Operator Menu	1209 0000 Batch Sizing Off Batch Select On History On Config Menu Off
Operator Screens	Screen 1

Batch Settings

Setting **Function** Scale Factor 25 0.000000.0 Batch D.P. Batch Legend Litres **Batch Limit** 1050.0

Batch Names Batch 1 Full Volume

Batch 2 Half Volume

Batch Size Full Volume 1000.0 Half Volume 500.0

CONTROL2delay 10 seconds 50.0

CONTROL2stop Count Mode Up Overrun Comp On

Rate Settings

Function Setting Rate Scaling 1.0 Rate D.P. 0.0000 Rate Legend L/s Timebase /Second Rate Filter Smoothing 2 Jump-Out 4 Low-Flow Rate 0.2 Flow Alarm Inhibit Time 0020

Clip-Off 0.0000

7. MAINTENANCE

7.1 Fault finding during commissioning

If a BA654D fails to function during commissioning the following procedure should be followed:

Symptom	Cause	Check:
No Display	No Power	That there is at
The Biopies	Incorrect wiring	least 20 volts between terminal 1 and 2. Terminal 1 should be positive.
Front panel pushbuttons do not function.	Batch controller conditioned to operate with remote switches.	User Controls configuration.
BA654D will not count input pulses or integrate 4/20mA input.	Input not correctly configured.	Signal input configuration.
	Input connected to wrong terminals or reversed.	Input terminals
	Incorrect electrical level	That pulse input exceeds batch controller's input switching thresholds.
		4/20mA loop can tolerate 0.6V drop introduced by the batch controller.
Control 1 is not energised and screen does not display 'Running' when Start button is operated.	Batch size setpoint not entered.	Batch setpoint. Enter or select the correct batch setpoint.
BA654D	The BA654D will	Note: The
continues to count after batch size setpoint is reached.	only stop counting when input pulses stop, or 4/20mA input current falls to 4mA.	control loop must be closed so that the batch controller output(s) control the input signal.
Configuration menus are not accessible.	Security link missing and / or security code not entered.	That terminals 18 & 19 are joined together.
		Enter four digit security code.
Function missing from sub-menu.	Functions dependent on higher level functions are removed from the menu if the higher level function is not selected.	That related higher level function has been selected.
Batch controller is not performing as anticipated.	Incorrect configuration.	Information menu that lists all the configuration settings.

The information sub-menu, which is described in section 5.2 and Appendix 2, lists all the batch controller configuration settings. This provides a rapid way of checking that the instrument has been correctly configured.

7.2 Fault finding after commissioning

ENSURE PLANT SAFETY BEFORE STARTING MAINTENANCE

If a BA654D fails after it has been functioning correctly, the table shown in section 7.1 may help to identify the cause of the failure.

If this procedure does not reveal the cause of the fault, please contact BEKA or our local agent.

7.3 Servicing

We recommend that faulty BA654D batch controllers are returned to BEKA associates or to our local agent for repair.

7.4 Routine maintenance

The mechanical and electrical condition of the instrument should be regularly checked. Initially annual inspections are recommended, but the inspection frequency should be adjusted to suit the environmental conditions.

See sections 5.4.4 and 5.4.5 if the batch controller's 4/20mA input is being used.

7.5 Guarantee

Instruments which fail within the guarantee period should be returned to BEKA associates or our local agent. It is helpful if a brief description of the fault symptoms is provided.

7.6 Customer comments

BEKA associates is always pleased to receive comments from customers about our products and services. All communications are acknowledged and whenever possible, suggestions are implemented.

8. ACCESSORIES

8.1 Tag number

The BA654D can be supplied with a blank or custom engraved stainless steel plate secured by two screws to the side of the instrument enclosure. This plate can accommodate:

- 1 row of 9 alphanumeric characters 10mm high.
- or 1 row of 11 alphanumeric characters 7mm high.
- or 2 rows of 18 alphanumeric characters 5mm high.

8.2 Pipe mounting kits


Two pipe mounting kits are available for securing the BA654D batch controller to a horizontal or vertical pipe.

- BA392D Stainless steel bracket secured by two worm drive hose clips for 60 to 80mm outside diameter pipe.
- BA393 Heavy duty stainless steel bracket secured by a single 'V' bolt. Will clamp to any pipe with an outside diameter between 40 and 80mm.


9. INDEX

Subject	Section	Subject	Section
Backlight	5.4.3	Menu	
Batch		Batch settings	5.5
Cycles	5.5.18	Configuration	5.
Decimal point D.P.	5.5.5	Operator	2.1
History	5.5.11	Rate settings	5.6
Legend	5.5.6	System	5.4
Limit	5.5.7		
Names	5.5.8	Operator	
Select	5.5.10	Controls	2.1
Size	5.5.9	Display	5.4.16
O a l'Il ma Cana		Screens	5.4.15, Appendix 1
Calibration	E 4 4	Output	5.4.0
4mA	5.4.4	2	5.4.8
20mA	5.4.5	3	5.4.9
Example	6.	4, 5 & 6 (optional)	5.4.10
Clip-off	5.6.8	Options Patals status	5.4.17
Configuration Batch	E E	Batch status	5.4.17.5
	5.5	Control 2	5.4.17.1
Default Rate	5.3 5.6	Control 3	5.4.17.2 5.4.17.3
System	6.4	Flow alarm Reset status	
CONTROL2delay	5.5.12	Overrun compensation	5.5.17
CONTROL2delay CONTROL3delay	5.5.14	Overruit compensation	3.3.17
CONTROL3delay CONTROL2stop	5.5.13	Pipe mounting kits	8.2
CONTROL3stop	5.5.15	Power supply	3.1
Count mode	5.5.16	Failure of	3.1.1
Count mode	0.0.10	Pulse output	5.4.11
EMC	4.3	i dioo odipat	0 1
External switches	3.5	Rate	
		Decimal point D.P.	5.6.2
Flow alarm	5.4.17.3, 5.6.7	Filter	5.6.6
	,	Legend	5.6.4
Grand total	5.4.12, Appen. 2	Scaling (pulse input)	5.6.1
		Timebase	5.6.5
Information sub-menu	Appendix 2	Reset pushbutton	2.1
Inhibit link	3.6	Restart	5.4.7
Inputs	3.2, 3.3	Delay	5.5.19
Analogue 4/20mA	3.3		
Proximity detector	3.2.2	Security	5.1, 5.4.14
Switch contact	3.2.1	Link	3.7
Voltage pulse	3.2.3	Scale factors	5.5.2, 5.5.3
Installation procedure	4.2	Scale points	5.5.1
		Scaling	5.5.4
Language	5.4.1	Signal input	5.4.3
Lineariser	5.4.6	Start pushbutton	2.1
Location	4.1	Stop pushbutton	2.1
		Switch outputs	3.4, 5.4.17
		Tag number	8.1
		User controls	5.4.2

Appendix 1 Operator display screens



Shows batch quantity, units of measurement & bargraph depicting batch progress.




Shows batch setpoint, batched quantity & bargraph depicting batch progress.




Shows batch setpoint, batched quantity and bargraph depicting progress. When autostart is used, also shows current batch number and number of batches requested.



Shows setpoint name, batched quantity and bargraph depicting progress. When autostart is used, also shows current batch number and number of batches requested.




Shows batched quantity and units of measurement plus rate of dispensing and units of measurement.



Commissioning screen shows, batched quantity and rate of dispensing plus status of all outputs.

Appendix 1 Continued

Explanation of commissioning screen 6

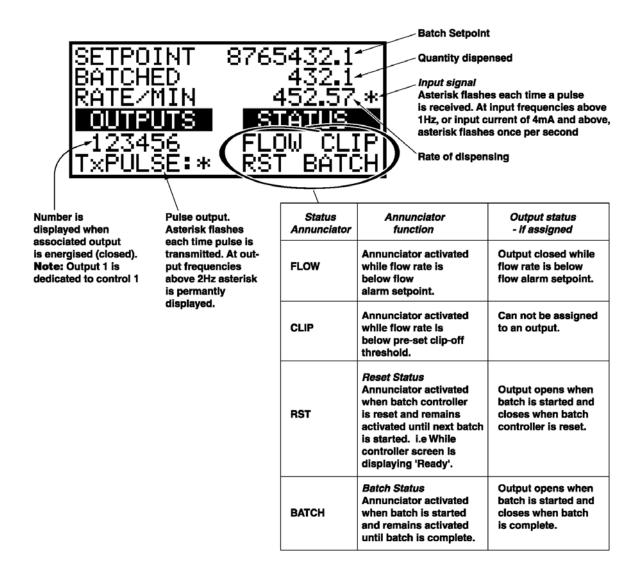

NOTE: Status annunciator is displayed irrespective of assignment to an output.

Appendix 2 Information menu

